


# STANDARD BRACKET ROLLER SHADE INSTALLATION INSTRUCTIONS

## STEP 1: CHECK PACKAGE CONTENTS

If any parts are missing, please call the place of purchase for replacement.

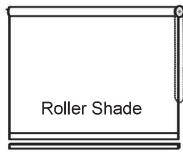


## STEP 2: TOOLS REQUIRED

Tape Measure - Pencil - Screwdriver or 1/4" Hex driver - Tape

## STEP 3: BRACKET LOCATION & INSTALLATION

Your Window Shade may be installed either inside or outside of the window frame. The universal brackets shown above can be mounted as inside, outside or as ceiling brackets. These brackets can also be mounted on either side of the shade to correspond with how the blind control was ordered. When measuring and installing shades make sure there is some play between the roller and the brackets. Shades mounted too tight in the brackets may not function properly.

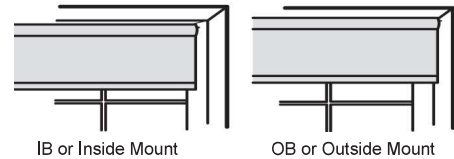

## STEP 4: MOUNTING THE BRACKETS & SHADE


### Inside Mount

The universal brackets included are designed to give proper clearance for your shade's operation when installed against the top corner of your window frame. Make sure that the "Universal Clutch bracket" is installed on the same side as the "control end" of your window shade. Install both brackets to each corner of your window frame and install the shade. Install the clutch end first, then place the idle end in the bracket and be sure to lock the metal clasp.



### Outside Mount


The Universal brackets included are designed to give proper clearance for your shades operation when installed against the side frame of your window. Make sure that the "Universal Clutch bracket" is installed on the same side as the "control end" of your window shade. The measurement between the outside edge of both brackets will measure 1/4 inch larger than the ordered size of your blind, so a 30 inch shade would have a measurement of 30 1/4 inches from outside edge to outside edge of the brackets. Install the shades by installing the clutch end first, then place the idle end in the bracket and be sure to lock the metal clasp.

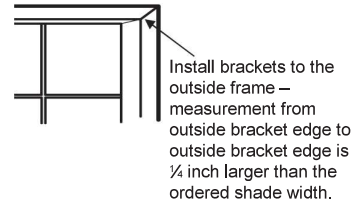

## STEP 5: SHADE FINAL ADJUSTMENT

If your shade does not roll up straight simply apply a piece of tape to the proper side of the shade. If your shade veers toward the RIGHT, lower the shade completely and place a piece of tape (more than one piece may be needed), as close to the LEFT edge of the roller as possible. This will act as a shim.

Once your shade is raising and lowering properly you then lower your shade to the proper length. Take the stopper bead and bend it at the crease. This bead is installed on the beaded chain to stop the shade at the proper length. Place this bead on the front side of the chain.

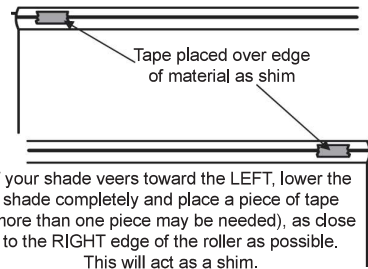

## STEP 6: INSTALL SAFETY DEVICE

This product has been engineered and manufactured to the highest standards of quality and performance. Please read this instruction sheet carefully before installing your new shade.