



Contemporary Metal & Art Guild 1.5"


## Bracket Mounting Template

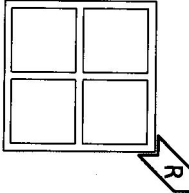

Mark

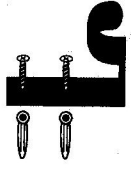


Mount

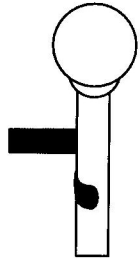


Install

- 1) Using this bracket mounting guide as shown below, mark the location on the wall for the mounting screws.
- 2) Drill 2 pilot holes per side for each bracket (3/16" drill bit) and insert wall anchors.
- 3) Attach bracket to wall with the screws provided.
- 4) Hang draperies on the rod and place into brackets.


Right




Right Side holes




Mark 2 holes per side for mounting brackets



Place window corner here




Place window corner here




Contemporary Metal & Art Guild 1.5"


## Bracket Mounting Template

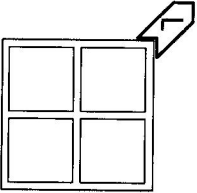

Mark

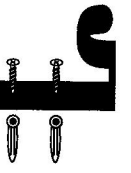


Mount

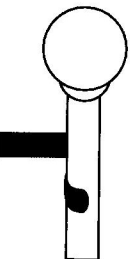


Install

- 1) Using this bracket mounting guide as shown below, mark the location on the wall for the mounting screws.
- 2) Drill 2 pilot holes per side for each bracket (3/16" drill bit) and insert wall anchors.
- 3) Attach bracket to wall with the screws provided.
- 4) Hang draperies on the rod and place into brackets.


Left




Left Side holes



Mark 2 holes per side for mounting brackets



Place window corner here



Place window corner here

